

2001 Toyota Sequoia Door Locks & Factory Arm & Disarm

The door locks operate with a third wire that must be opened to lock and grounded to unlock. The relay and diode configuration below will allow you to lock, arm, unlock and disarm the locks and the factory alarm. The module is located at the Drivers Door Switch

