



User-selectable features

SuperNova II comes from the factory with all of its features pre-programmed as noted in the table below. To change any of the settings, use the procedure noted. To restore the feature to its factory setting, just repeat the procedure:

1. **Select** the feature you wish to program from the table below. Note the number of momentary (spring-loaded) **taps**.
2. Turn the **ignition on**, then enter the **valet code** (the single digit 2) by tapping the PlainView switch's momentary side twice, then press to latched (the LED will turn on to indicate programming mode).
3. Immediately tap and release the **momentary** side of the switch the **number of times indicated** in the third column of the programming table for the feature you selected (to help you count, you will hear a single chirp confirmation each time you tap the momentary side).
 - a. If noted, immediately perform the **"secondary action."**
4. **Wait** for the program completion confirmation (1-4 chirps and the LED will turn off), then turn the **ignition off**.
5. Repeat steps 1-4 for any other features you wish to program.

Feature	Factory setting	# of momentary taps	Secondary action	Program completion confirmation	Result
AutoArming	ON	4	—	1 chirp = OFF 2 chirps = ON	Change state from ON to OFF or vice-versa
AutoArm & Lock	OFF	5	—	1 chirp = OFF 2 chirps = ON	Change state from OFF to ON or vice-versa
False Alarm Control and Test	ON	6	—	1 chirp = OFF 2 chirps = ON	Change state from ON to OFF or vice-versa
AutoLock	ON	7	—	1 chirp = OFF 2 chirps = ON	Change state from ON to OFF or vice-versa
AutoUnLock	ON	8	—	1 chirp = OFF 2 chirps = ON	Change state from ON to OFF or vice-versa
Arm/disarm chirp confirmations	ON	9	—	1 chirp = OFF 2 chirps = ON	Change state from ON to OFF or vice-versa
Siren Duration (30/60sec.)	30 sec.	10	—	1 chirp = 60sec 2 chirps = 30sec	Change duration from 30 to 60 seconds or vice-versa
Add a New Remote to Channel 1 (arm/disarm)	—	11	Press remote control button 1	1 chirps	Button 1/channel 1 code of the new remote control has been memorized
Add a New Remote to Channel 2 (optional smart trunk release)	—	12	Press remote control button 2	2 chirps	Button 2/channel 2 code of the new remote control has been memorized
Add a New Remote to Channel 3 (silent arm/disarm)	—	13	Press remote control button 3	3 chirps	Button 3/channel 3 code of the new remote control has been memorized
Add a New Remote to Channel 4 (optional remote accessory)	—	14	Press remote control button 4 of the optional 4-button/12-channel remote control	4 chirps	Button 4/channel 4 code of the new remote control has been memorized
Erase all channels	—	15	—	2 chirps	All channels have been erased, program new remote control(s) into channels 1-4
Valet Code	This feature should be set only by the vehicle owner.				
Set channel 4 timer (1sec. - 2min.)	30 sec.	17	The timer starts as soon as you select this feature. Turn the ignition off after desired duration has elapsed.	1 chirp after ignition is off	Change timer to any interval between one second and two minutes
Channel 4 output type (pulsed/timed/latched)	Pulsed	18	—	1 chirp=pulsed 2 chirps=timed 3 chirps=latched	Change type to pulsed, timed or latched
AutoActivate channel 4 output when system is remotely armed	OFF	19	—	1 chirp = OFF 2 chirps = ON	Change state from ON to OFF or vice-versa
Starter/ignition interrupt relay (normally closed/open)	CLOSED	20	—	1 chirp = open 2 chirps = closed	Change relay from NORMALLY CLOSED to NORMALLY OPEN or vice-versa
High/low setting for vehicles with delayed courtesy lights	OFF	21	—	1 chirp = OFF 2 chirps = ON	Change state from ON to OFF or vice-versa
Lock pulse duration (1sec/3sec)	1sec.	22	—	1 chirp = 3sec 2 chirps = 1sec	Change state from 1sec to 3sec (for old Audis and MBZs) or vice-versa