## DIRECTWIRE™ WIRING INFORMATION - CHEVROLET / CORVETTE / 2005 / Remote Start

## [PRINT THIS PAGE]

<u>12volts</u>	red/black (60A)	+	BCM, C3, pin D1				
	trol Module) is part of the fuse/relay tors: C1-72 pin gray, C2-72 pin gray,		•				
<u>Starter</u>	purple (not for remote start)	+	starter or fuse block under hood				
Second Starter	N/A						
<u>Ignition</u>	pink (not for remote start)	+	BCM, C4, pin C8				
	trol Module) is part of the fuse/relay k						
Second Ignition	tors: C1-72 pin gray, C2-72 pin gray,	C3-41 pin red, and C4-68 p	oin gray.				
Third Ignition	N/A N/A						
Accessory	IV/A						
Second Accessory	N/A						
Keysense	N/A						
			door lock switch in				
Power Lock	orange/black	-	driver door				
Power Unlock	orange/black	-	door lock switch in driver door				
<u>Lock Motor</u>	lt. green/black	5wi	dr kick or RCDLR, 16 pin plug, pin B				
Notes: The RCDLR (Remote Control Door Lock Receiver) is under the upper dash panel towards the passenger significant control process.							
<u>Unlock Motor</u>	tan	5wi	driver kick or BCM, C3, pin A1				
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the carpet. It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.							
Parking Lights+	brown	+	harness to rear				
Parking Lights-	brown/white	-	switch or BCM, C2, pin 5				
	trol Module) is part of the fuse/relay b tors: C1-72 pin gray, C2-72 pin gray,						
Hazards	tan	-	switch or BCM, C2, pin 9				
	trol Module) is part of the fuse/relay tors: C1-72 pin gray, C2-72 pin gray,						
Turn Signal(L)	It. blue/white (F), yellow (R)	+	BCM, C1, pin 38 and C3, pin A9				
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the carpet. It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.							
Turn Signal(R)	dk. blu/wht (F), dk. green (R)	+	BCM, C1, pin 56 and C3, pin A12				
	trol Module) is part of the fuse/relay tors: C1-72 pin gray, C2-72 pin gray,						
Reverse Light	lt. green	harness to rear or C3, pin D9					
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the carpet. It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.							
<u>Door Trigger</u>	gray/black (L), tan/white (R)	-	BCM, C1, pins 51 and 53				

Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that he following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Pin orange/black harness to rear or International C1, pin 18  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Hood Pin pink/black	Notes: Use both wires and diode isolate each.										
the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Dome Supervision white white BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Pin orange/black harness to rear or IC1, pin 18 harness to rear or	The BCM (Body Control Mod	dule) is part	of the fuse/relay blo	ock or	n the passenger	floor board	under the carpet. It has				
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Pin orange/black horizon (C1, pin 18)  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Hood Pin pink/black pin pink/black pink/bl											
It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Pin orange/black - harness to rear or C1, pin 18  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the cat that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Hood Pin pink/black pin 69  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the cat that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Release prown/white switch on the fuse/relay block on the passenger floor board under the cat that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Release prown/white switch on the fuse/relay block on the passenger floor board under the cat that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  The fuel door release is white (-) at the switch on the dash or the fuse/relay block on the passenger floor board under the cat pet.  Power Sliding Door N/A  Factory Alarm Am factory remote only  Disarm No Unlock  Tachometer white ac cluster or ECM, b plug, pin 48  Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the accented by the same passenger floor board under the cat that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Potes: The ECM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the cat thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake it. blue parking brake switc cluster switch as the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake it. blue memory switch in Memory Seat 1 white memory switch in Memory Seat 1 white memory switch in Memory Seat 1 w	<b>Dome Supervision</b>	white		-		BCM, C3, pin A10					
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Hood Pin pink/black pin switch or BCM, pin switch or BCM, pin 69 Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Release brown/white Switch or BcM, C1 71  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  The fuel door release is white (-) at the switch on the dash or the fuse/relay block on the passenger floor board under the carpet.  Power Silding Door N/A  Factory Alarm Arm factory remote only  Factory Alarm Disarm factory remote only  Disarm No Unlock  Tachometer white ac cluster or ECM, b plug, pin 48  Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the acceptable behind the wheel to get to it.  For tach, can also go to any ignition coil or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start N/A  Brake Wire It. blue + harness to rear or C4, pin D4  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake It. blue - parking brake switt cluster with the switch or BCM, C2  It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1 white purple - memory switch in Memory Seat 2 purple - memory switch in Memory Seat 1 white memory Seat 2 purple - memory switch in Memory Seat 1 white memory Seat 2 purple - memory switch in Memory Seat 2 purple - memory switch in Memory Se	Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the carpet. It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.										
It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Hood Pin pink/black pink/black pink/black pink/black pink of the fuse/relay block on the passenger floor board under the cal thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Release brown/white	Trunk/Hatch Pin		orange/black		-		harness to rear or BCM, C1, pin 18				
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Trunk/Hatch Release  brown/white	Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the carpet. It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.										
Trunk/Hatch Release   brown/white   .   switch or BCM, C1	Hood Pin		pink/black -				pin switch or BCM, C1, pin 69				
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  The fuel door release is white (-) at the switch on the dash or the fuse/relay block on the passenger floor board under the carpet.  Power Sliding Door Factory Alarm Arm Factory remote only  Factory Alarm Disarm factory remote only  Disarm No Unlock  Tachometer white ac cluster or ECM, be plug, pin 48  Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the accepance behind the wheel to get to it.  For tach, can also go to any ignition coll or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start N/A  Brake Wire It. blue + C4, pin D4  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake It. blue - parking brake swite cluster  Horn Trigger yellow to tan - switch or BCM, C2  1t has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1 white - memory switch in Memory Seat 2 purple - memory switch in Memory Seat 3 N/A - memory Seat 1 white - memory switch in Memory Seat 2 purple - memory switch in Memory Seat 3 N/A - memory Seat 1 white - memory switch in Memory Seat 3 N/A - memory Seat 3 N/A - Elmmobilizer  Part #: N/A  Notes: No information available at this time.	Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the carpet. It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.										
It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  The fuel door release is white (-) at the switch on the dash or the fuse/relay block on the passenger floor board under the carpet.  Power Silding Door N/A  Factory Alarm Arm factory remote only  Factory Alarm Disarm factory remote only  Disarm No Unlock  Tachometer white ac cluster or ECM, be plug, pin 48  Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the acceptance behind the wheel to get to it.  For tach, can also go to any ignition coil or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start N/A  Brake Wire It. blue + harness to rear or C4, pin D4  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake It. blue - parking brake switt cluster  Horn Trigger yellow to tan - switch or BCM, C2  14  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1 white - switch or BCM, C2  14  Interface Module: Category: Required: Type: memory switch in Memory Seat 2 purple - memory switch in Memory Seat 3 N/A - Interface Module: Category: Required: Type: Immobilizer Bypass N/A  Notes: No information available at this time.	Trunk/Hatch Release		brown/white -			switch or BCM, C1, pin 71					
under the carpet.  Power Silding Door   N/A   Factory Alarm Arm   factory remote only    Factory Alarm Disarm   factory remote only    Disarm No Unlock	Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the carpet. It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.										
Factory Alarm Arm factory remote only  Factory Alarm Disarm factory remote only  Disarm No Unlock  Tachometer white ac cluster or ECM, b plug, pin 48  Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the acceptable behind the wheel to get to it.  For tach, can also go to any ignition coil or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start N/A  Brake Wire It. blue + harness to rear or IC4, pin D4  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake It. blue - parking brake switt cluster  Horn Trigger yellow to tan - switch or BCM, C2  14  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1 white - switch or BCM, C2  14  Memory Seat 1 white - memory switch in Memory Seat 2 purple - memory switch in Memory Seat 3 N/A - memory Seat 3 N/A - Inmobilizer  Interface Module: Category: Required: Type: Immobilizer  Part #: N/A  Notes: No information available at this time.		te (-) at the	switch on the dash	or the	e fuse/relay bloc	k on the pa	assenger floor board				
Factory Alarm Disarm Disarm No Unlock  Tachometer White ac Cluster or ECM, b plug, pin 48  Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the acc panel behind the wheel to get to it.  For tach, can also go to any ignition coil or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start N/A  Brake Wire It. blue + harness to rear or I C4, pin D4  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the ca It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake It. blue - parking brake switt cluster  Horn Trigger yellow to tan - switch or BCM, C2 14  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the ca It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the ca It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1 white - memory switch in Memory Seat 2 purple - memory switch in Memory Seat 3 N/A  Interface Module:  Category: Immobilizer Bypass Required: Yes Immobilizer Type: Immobilizer Part #: N/A  Notes: No information available at this time.	Power Sliding Door		N/A								
Disarm No Unlock Tachometer white ac cluster or ECM, b plug, pin 48  Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the accepanel behind the wheel to get to it.  For tach, can also go to any ignition coil or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start N/A  Brake Wire It. blue + harness to rear or C4, pin D4  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake It. blue - parking brake switt cluster  Horn Trigger yellow to tan - switch or BCM, C2 14  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1 white - switch in Memory Seat 2 purple - memory switch in Memory Seat 3 N/A - memory switch in Memory Seat 3 N/A -   Interface Module: Category: Required: Type: Immobilizer Bypass Part #: N/A  Notes: No information available at this time.  Relay Type: Location: n/a	Factory Alarm Arm	factory remote only									
Tachometer  white  ac  cluster or ECM, b plug, pin 48  Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the acc panel behind the wheel to get to it.  For tach, can also go to any ignition coil or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start  N/A  Brake Wire  It. blue  + harness to rear or I C4, pin D4  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the ca It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake  It. blue  - parking brake switt cluster  Horn Trigger  yellow to tan  - switch or BCM, C2 14  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the ca It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1  white  - memory switch in Memory Seat 2  purple  - memory switch in Memory Seat 3  N/A  Interface Module:  Category: Immobilizer Bypass  Required: Immobilizer  Part #: N/A  Notes: No information available at this time.  Relay Type: In/A  Relay Type: In/A  Location: In/a	Factory Alarm Disarm	factory remote only									
Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the accepanel behind the wheel to get to it.  For tach, can also go to any ignition coil or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start  N/A  Brake Wire  It. blue  It. blue  It. blue  It. blue  It. blue  Parking Brake  It. blue  It. blue  Parking Brake  It. blue  Parking Brake  It. blue  It. blue  Parking Brake  Brake Wite  Category:  Immobilizer  Brake  It. blue  Parking Brake  Parki	Disarm No Unlock										
panel behind the wheel to get to it.  For tach, can also go to any ignition coil or fuel injector and use the wire that is NOT pink, brown, or black.  Wait to start  N/A  Brake Wire  It. blue  Harness to rear or C4, pin D4  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake  It. blue  Parking Br	<u>Tachometer</u>		white		ac		cluster or ECM, blue plug, pin 48				
Wait to start   N/A   Brake Wire   It. blue   +	Notes: The ECM (Engine Control Module) is in the front passenger fender. Have to remove the wheel and the access panel behind the wheel to get to it.										
Brake Wire	· ·	ignition coi	-	use	the wire that is N	NOT pink, k	orown, or black.				
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake  It. blue  - parking brake switt cluster  Horn Trigger  yellow to tan  - switch or BCM, C2 14  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1 white - memory switch in Memory Seat 2 purple - memory switch in Memory Seat 3 N/A  Interface Module:  Category: Required: Type: Immobilizer Bypass Yes Immobilizer  Part #: N/A  Notes: No information available at this time.  Relay Type: Location: n/a	Wait to start	N/A				DOM.					
It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Parking Brake  It. blue  Jeach of BCM, C2-14  Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call thas the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1  White  Memory Seat 2  Purple  Jumple  Category:  Interface Module:  Category:  Immobilizer Bypass  Required:  Yes  Type:  Immobilizer  Part #: N/A  Notes: No information available at this time.  Relay Type:  In/a  Location:  In/a							C4, pin D4				
Horn Trigger  Yellow to tan  Yellow to tan  Yellow to tan  Wellow to tan  Horn Trigger  Yellow to tan  Yellow to tan  Yellow to tan  Yellow to tan  Wellow t											
Notes: The BCM (Body Control Module) is part of the fuse/relay block on the passenger floor board under the call that the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.  Memory Seat 1 white - memory switch in Memory Seat 2 purple - memory switch in Memory Seat 3 N/A -   Interface Module: Category: Required: Type: Immobilizer Bypass Yes Immobilizer Part #: N/A  Notes: No information available at this time.  Relay Type: Location: n/a	Parking Brake	It. blue		-		cluster					
It has the following connectors: C1-72 pin gray, C2-72 pin gray, C3-41 pin red, and C4-68 pin gray.    Memory Seat 1		•		-		14					
Memory Seat 2       purple       -       memory switch in         Memory Seat 3       N/A       -       memory switch in         Interface Module:       Category: Immobilizer Bypass       Required: Yes       Type: Immobilizer         Part #: N/A       Notes: No information available at this time.         Smart Starter Kill Relays:       Relay Type: n/a       Location: n/a											
Interface Module:  Category: Immobilizer Bypass  Required: Yes  Type: Immobilizer  Part #: N/A  Notes: No information available at this time.  Relay Type: n/a  Location: n/a				-		memory switch in door					
Interface Module:  Category: Immobilizer Bypass  Required: Yes  Type: Immobilizer  Part #: N/A  Notes: No information available at this time.  Relay Type: n/a  Location: n/a					-		memory switch in door				
Part #: N/A Notes: No information available at this time.  Relay Type: n/a  Location: n/a	iviemory seat 3		IW/A		-						
Part #: N/A Notes: No information available at this time.  Relay Type: n/a  Location: n/a			Catagory		Doguirod:		Typo				
Notes: No information available at this time.  Smart Starter Kill Relays:  Relay Type:  n/a  Location:  n/a	Interface Module:				·						
Smart Starter Kill Relays:  Relay Type:  n/a  Location:  n/a											
Smart Starter Kill Relays: n/a n/a	Notes: No information avail	lable at this	time.								
Smart Starter Kill Relays: n/a n/a											
Deat // Net December and ad			3 3,								
Part #: Not Recommended											

## DISCLAIMER

This wiring information is being provided free of charge on an "as is" basis, without any representation or warranty. It is your responsibility to verify any circuit before interfacing with it using a digital multimeter. Directed electronics, Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case is and remains the responsibility of the installer. DEI assumes no liability or responsibility resulting from improper installation, even in reliance upon this information.