


## **tech**tips

## Saturn ION using 555L

The Saturn ION has two passlock wires, WHITE and WHITE/BLACK. The WHITE wire must be interuppted with the YELLOW wire to the key side and the BLACK/YELLOW wire to the BCM side. After all connections are completed with the exception of the PINK ignition wire from the 555L, temporarily connect the 555L PINK wire to the vehicle's BLUE ignition wire. Start the vehicle and hold the key in the crank position for 5 to 10 seconds so that the 555L can learn resistance. After this is completed, connect the PINK wire from the 555L to the PINK/WHITE second ignition wire from the remote start unit. The PINK wire on the 555L must only have power during remote start, which the PINK/WHITE wire provides.

## 555L Wiring Diagram

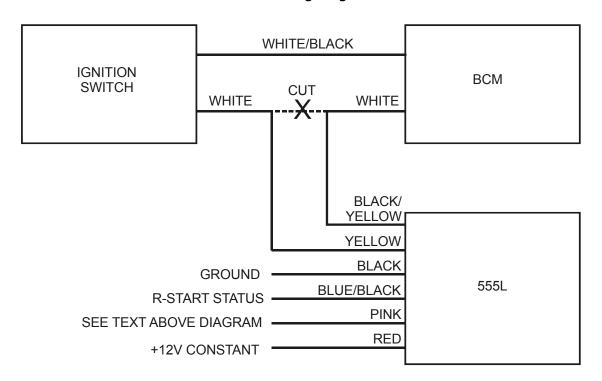

NOTE: BLACK/WHITE and VIOLET wires from 555L are not used.

**IMPORTANT!** This wiring information is being provided free of charge on an "as is" basis, without any representation or warranty. It is the dealer's responsibility to verify any circuit before interfacing with it using a digital multi-meter. Directed Electronics Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case remains the responsibility of the installer.

© 2003 Directed Electronics, Inc.

TechTips 1610 10-03

<b>IMPORTANT!</b> This wiring information is being provided free of charge on an "as is" basis, without any representation or warranty. It is the dealer's responsibility to verify any circuit before interfacing with it using a digital multi-meter. Directed Electronics Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case remains the responsibility of the installer.		