

Toyota & Lexus Door Locks & Factory Arm & Disarm

The door locks operate with a third wire that must be opened to lock and grounded to unlock. The relay and diode configuration below will allow you to lock, arm, unlock and disarm the locks and the factory alarm. The module is located at the Drivers Door Switch.

<u>Vehicle</u>	<u>Lock Detection Wire</u>	<u>Lock Wire</u>	<u>Unlock Wire</u>
01-UP TOYOTA SEQUOIA	RED/YELLOW	LT.GREEN/BLACK	LT.GREEN/RED
00-UP TOYOTA AVALON	LIGHT GREEN	BLUE/WHITE	BLUE
98-UP LEXUS GS 300-400	GRAY	PINK/BLACK	PINK/GREEN
98-UP LEXUS RX 300	GRAY	PINK	PINK/BLUE
99-00 LEXUS LS 400	GRAY	GREEN/ORANGE	GREEN
01-UP LEXUS IS 300	BLUE/BLACK	GREEN/RED	GREEN/BLACK
04- TOYOTA TUNDRA(4-DR ONLY)	RED/YELLOW	LT.GREEN/BLACK	LT.GREEN/RED

