



TRK-SR2 QUICK INSTALLATION GUIDE

INSTALLATION: BEFORE BEGINNING
MAKE SURE YOU HAVE ALL PARTS
LISTED IN FIG. 2!

1. Clean installation surface using supplied alcohol cleaning towelette and let dry.
2. Remove Red Plastic covering from adhesive on the bottom of the antenna and mount antenna to installation surface.
3. Connect Satellite and Terrestrial lines to the XM Tuner Box (Fig. 1)
4. Turn XM radio unit on.

TIPS & PRECAUTIONS:

1. When selecting a surface to mount the antenna make sure of the following:
 - The site is a conductive surface (i.e. metal or aluminum)
 - The antenna is placed on a section of the roof that provides 4-3/4" x 4-3/4" of relatively flat metallic surface area
 - The antenna should be at least 5" from the rear window
2. The TRK-SR2 needs to be mounted outside on the highest point of the vehicle. DO NOT MOUNT ON TRUNK except on convertibles.
3. In most vehicles it is suggested that you mount the XM Tuner in the trunk so that the TRK-SR2 cables will be able to reach the XM receiver.
4. When pressing the TRK-SR2 onto the vehicle's roof, apply an initial contact force of 15 to 20 PSI (steady finger-tip pressure) for 60 seconds. Allow 20 minutes for the adhesive to set before driving the vehicle.
5. After installation, avoid running the vehicle through a car wash for 72 hours.
6. If XM Radio displays "Antenna" or "Check Antenna", check antenna connections to the XM receiver. If XM Radio displays "No Signal", the vehicle may be in an area where the XM Signal may be too weak. Move vehicle outdoors or to a location which has fewer buildings. If you are experiencing any other problems or require spare adhesive pads call 1-800-942-TERK (8375).

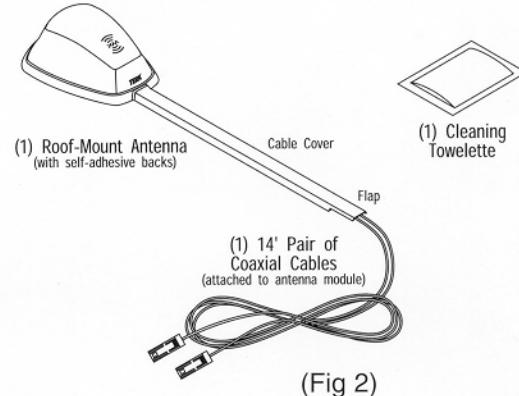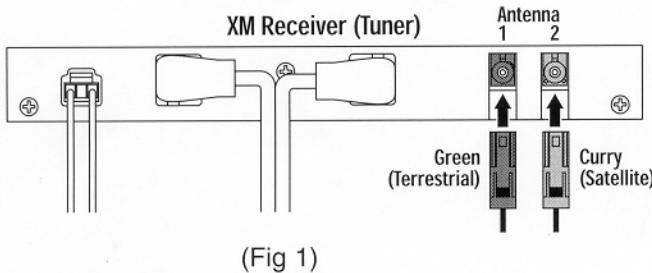

For TERK Tech Support
visit www.terk.com or
Call 1-800-942-TERK (8375)



TERK[®]