


techtips

2005 and Up Chrysler/Dodge/Jeep Negative 2nd Start/Accy Wiring Diagram

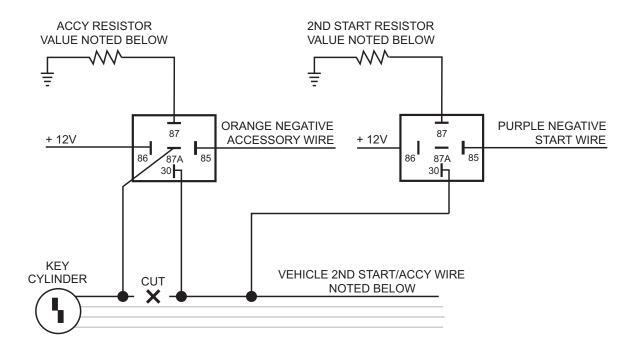

Vehicle	Accy Resistor Value	2 [™] Start Resistor Value	2 [™] Start/Accy Wire Color
05 and up Magnum	610 ohm	180 ohm	Purple/Brown
05 and up 300/300C	610 ohm	180 ohm	Purple/Brown
05 and up Grand Cherokee	560 ohm	150 ohm	Purple/Brown

IMPORTANT! This wiring information is being provided free of charge on an "as is" basis, without any representation or warranty. It is the dealer's responsibility to verify any circuit before interfacing with it using a digital multi-meter. Directed Electronics Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case remains the responsibility of the installer.

© 2005 Directed Electronics, Inc.

TechTips 1084 04-05