


Dodge Avenger 2008

Chrysler Multiplex Switch

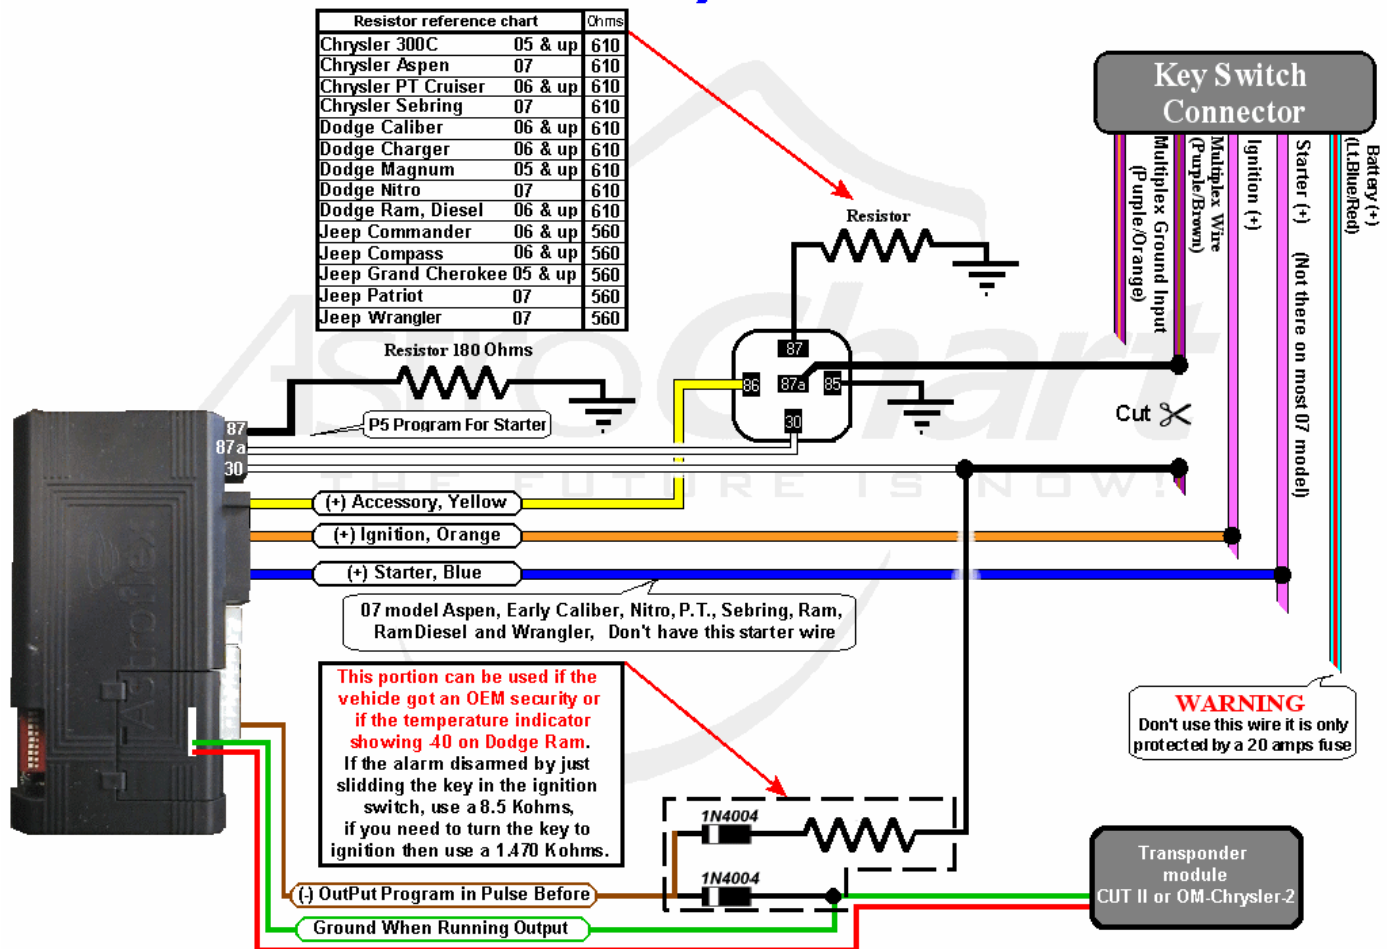

This data sheet is supplied as information purpose only. Astroflex does not, in any way, warrant accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages maléfiques ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.