

Chevrolet Tahoe 2002



This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.

Chevrolet Tahoe 2002

WIRE	COLOR	LOCATION	POL.
Battery 1	Red	Ignition Harness	Positive
Ignition 1	Pink (1)	Ignition Harness	Positive
Ignition 2	White (1)	Ignition Harness	Positive
Starter 1	Yellow	Ignition Harness	Positive
Accessory 1	Orange	Ignition Harness	Positive
Accessory 2	Brown	Ignition Harness	Positive
Parklights Positive	Brown	At Parking Light Switch Harness	Positive
Brake Lights	White	At Brake Switch (Above Brake Pedal)	Positive
Horn	Black	At Steering Column	Negative
Tach	White	At BCM Module (under Hood, under battery)	4 Cyl.
Lock	Lt. Blue	Driver's Kick Panel (3)	Positive
Unlock	White	Driver's Kick Panel (3)	Positive
Trunk	Black	At Trunk Switch Harness	Positive
E-Brake	Dk-Green/White	At Parking Brake Switch	Negative
Disarm	Lt. Green	At Keyless Module (under steering column)	Negative
Rearming	Type 1 (4) (5)		
Dome Sensor	Purple	At Dome Light Switch	Negative
KeySense	Lt-Green	At BCM Module (below steering column)	Negative
Door Pin FL	Tan	At BCM Module (below steering column)	Negative
Door Pin RL	Dk-Blue/White	At BCM Module (below steering column)	Negative
Door Pin FR	Dk-Blue/White	At BCM Module (below steering column)	Negative
Door Pin RR	Dk-Blue/White	At BCM Module (below steering column)	Negative
Rear Defogger	White	At Defogger Switch Harness	Negative

IM/OM Compatibility

- OM-Passlock-3 (310-061-512) - OM-Passlock-4 (310-907-550) - OM-Passlock-5 (310-907-551) - OM-Passlock-6 (310-907-552)
- OM-Passlock-6 (310-907-552) - GMBP - 555L(W)

Comments :


Note : This vehicle is equipped with an immobilizer system that needs to be bypassed, (passlock 2)

- (1) Some models have a Pink/White 3rd. ignition wire that must be powered when doing remote start.
- (2) ECM is located on drivers side inner fender. Tach wire found in a black plug marked "White".
- (3) If the vehicle is equipped with a keyless entry, door locks are positive.
- (4) Driver door pin tan (-) at keyless under steering column.
- (5) Have to Absolutely pulse the driver's door pin after the run time. If not, the radio will stay ON and shut down the battery

This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.


Chevrolet Tahoe 2002

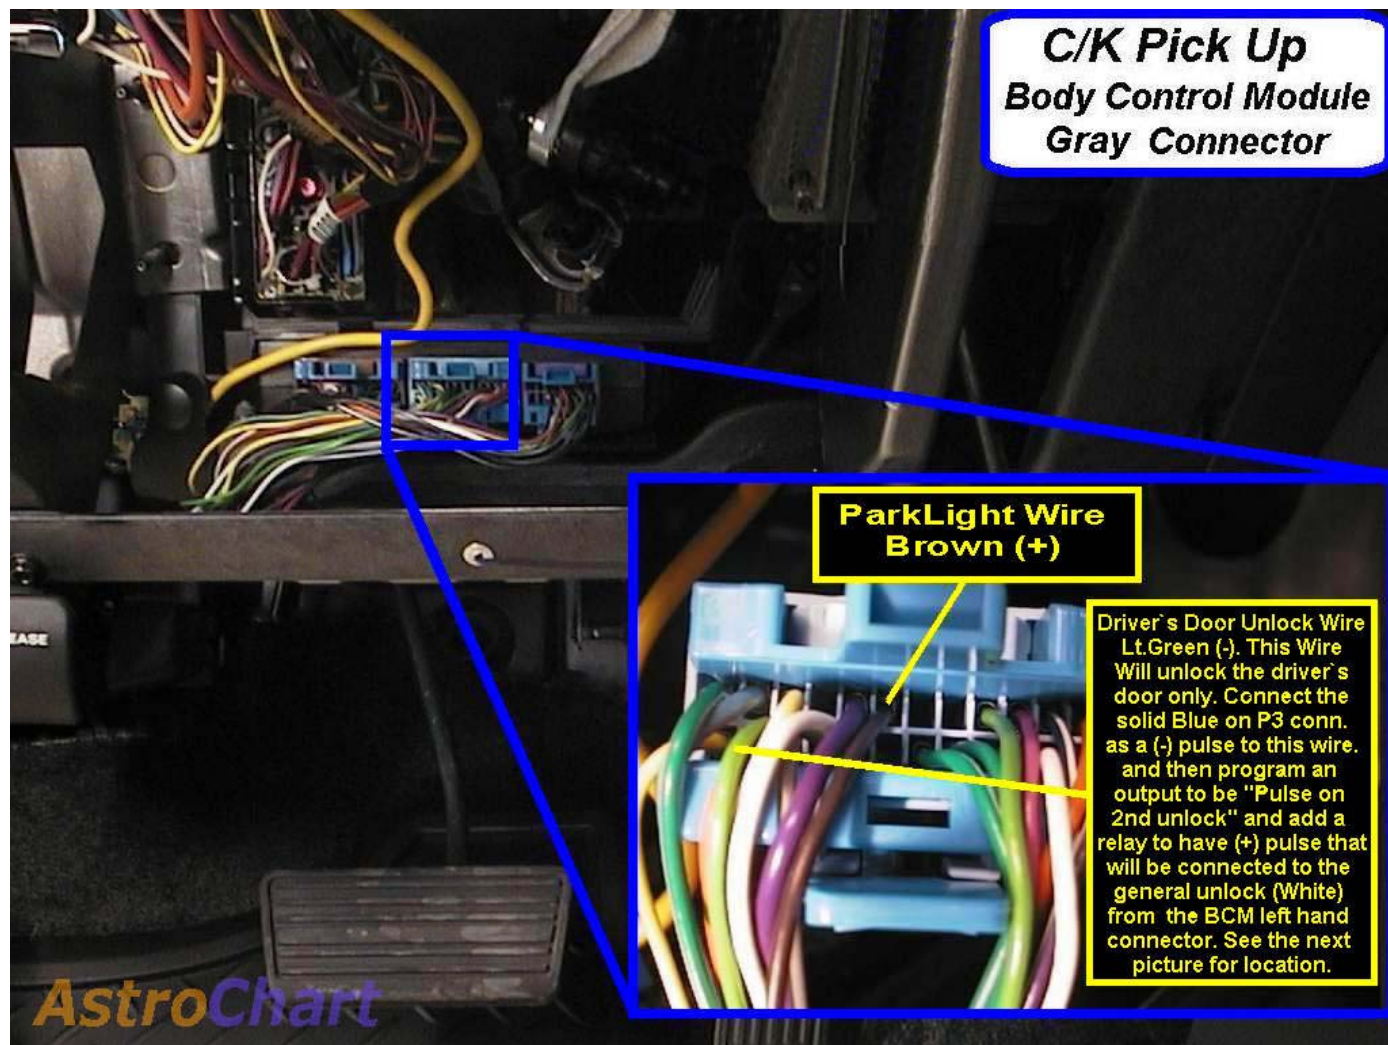

This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.


Chevrolet Tahoe 2002

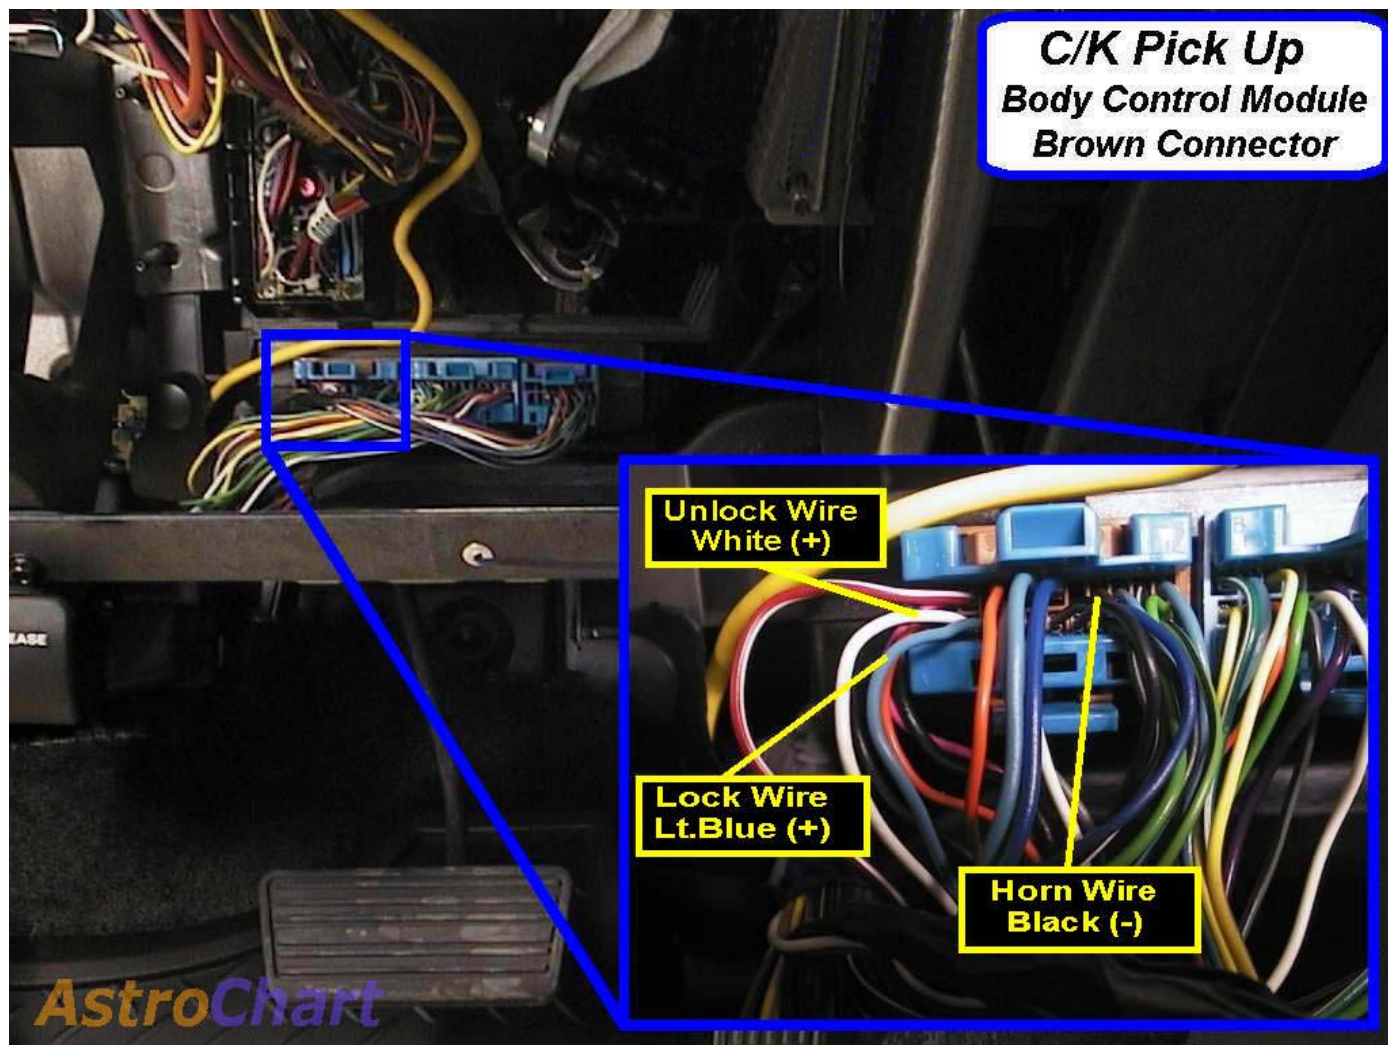

This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.


Chevrolet Tahoe 2002

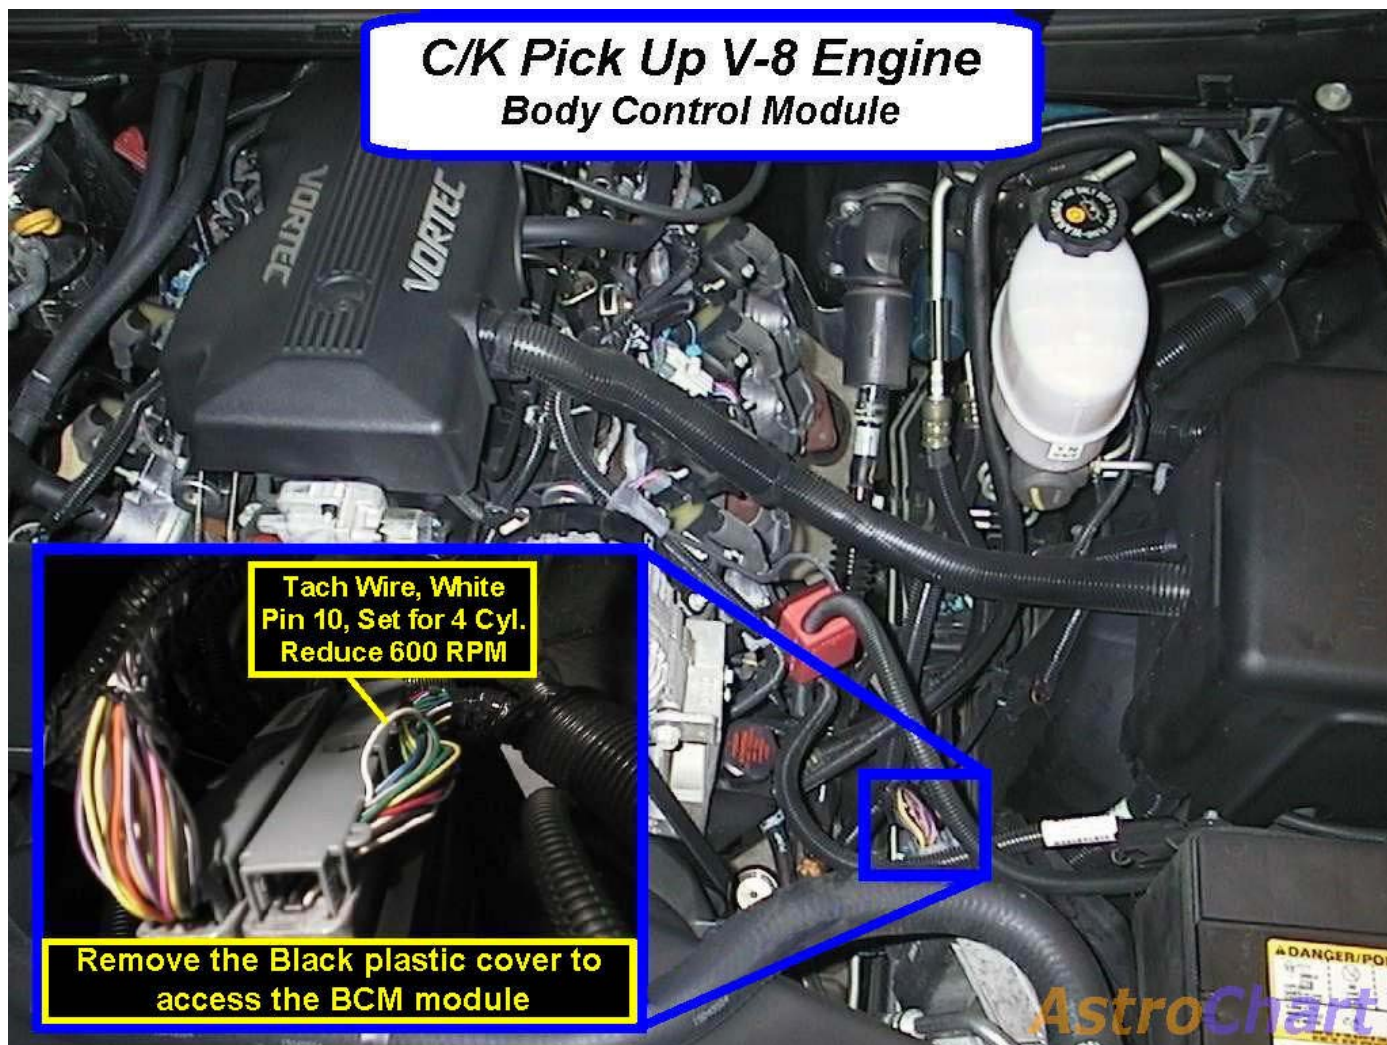

This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.

Chevrolet Tahoe 2002

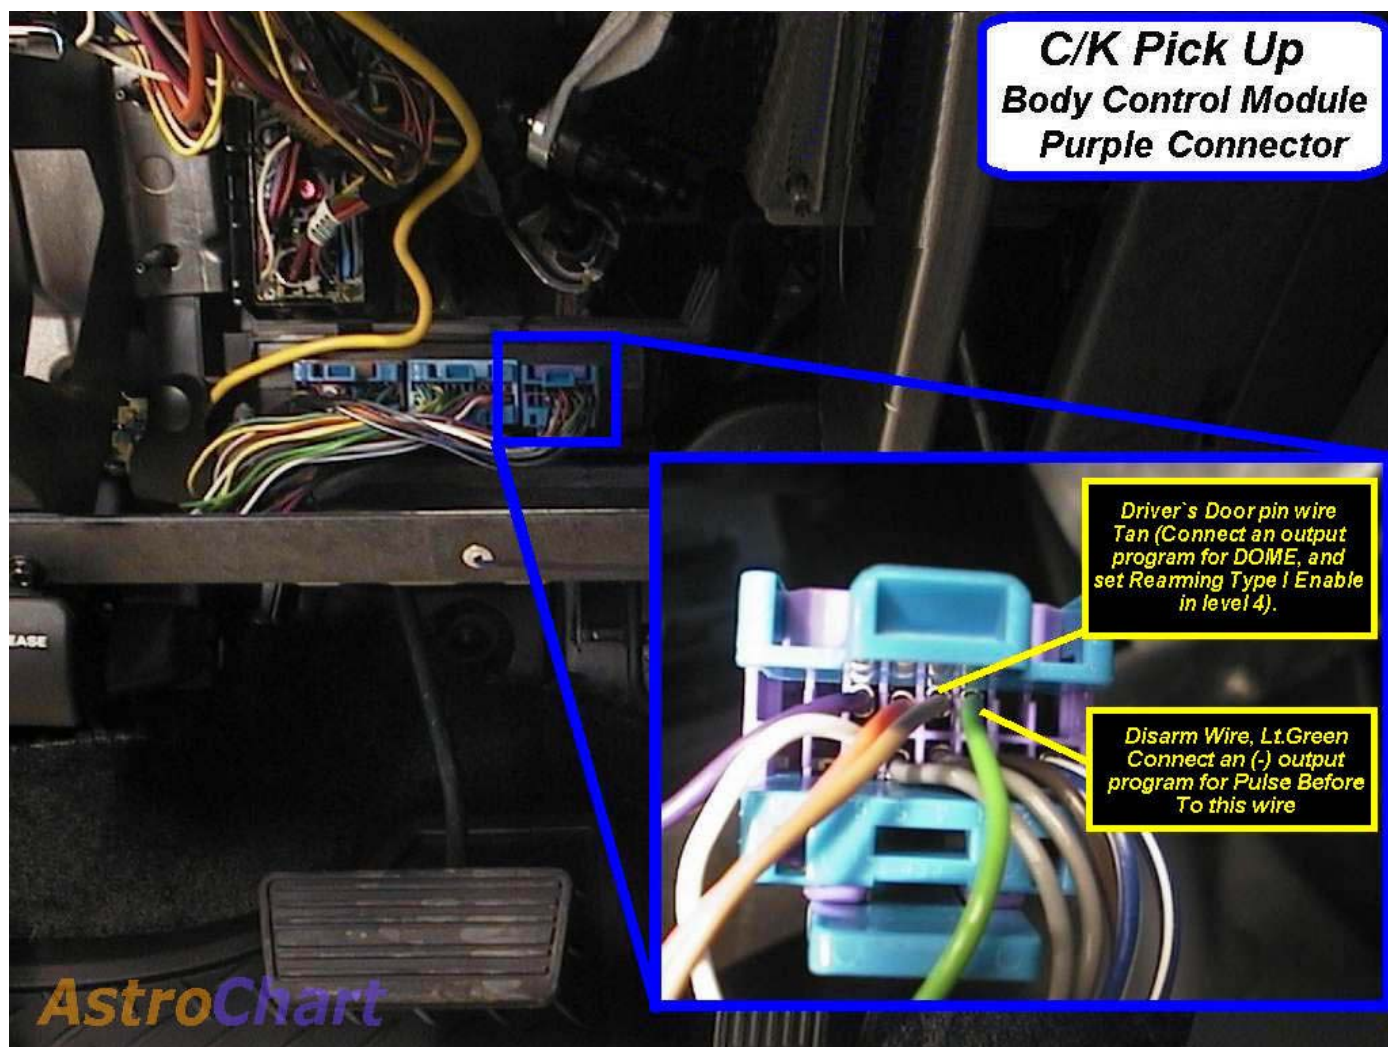


This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.

Chevrolet Tahoe 2002

REVERSE POLARITY DOOR LOCK

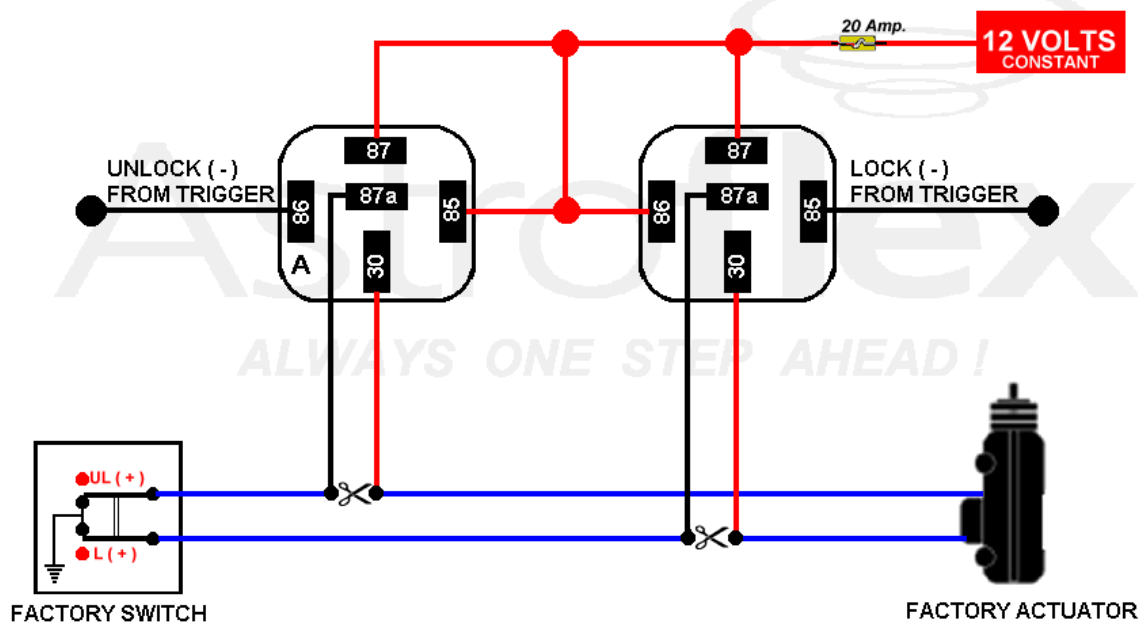

This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.

Chevrolet Tahoe 2002


Reverse Polarity

On AstroStart modul that has P3 connector with built in door lock relay

Legend

- 1 - Brown/White Wire
- 2 - Blue/White Wire
- 3 - White/Brown Wire
- 4 - White/Blue Wire
- 5 - Brown Wire
- 6 - Blue Wire

1105 , 2106
4106 unit

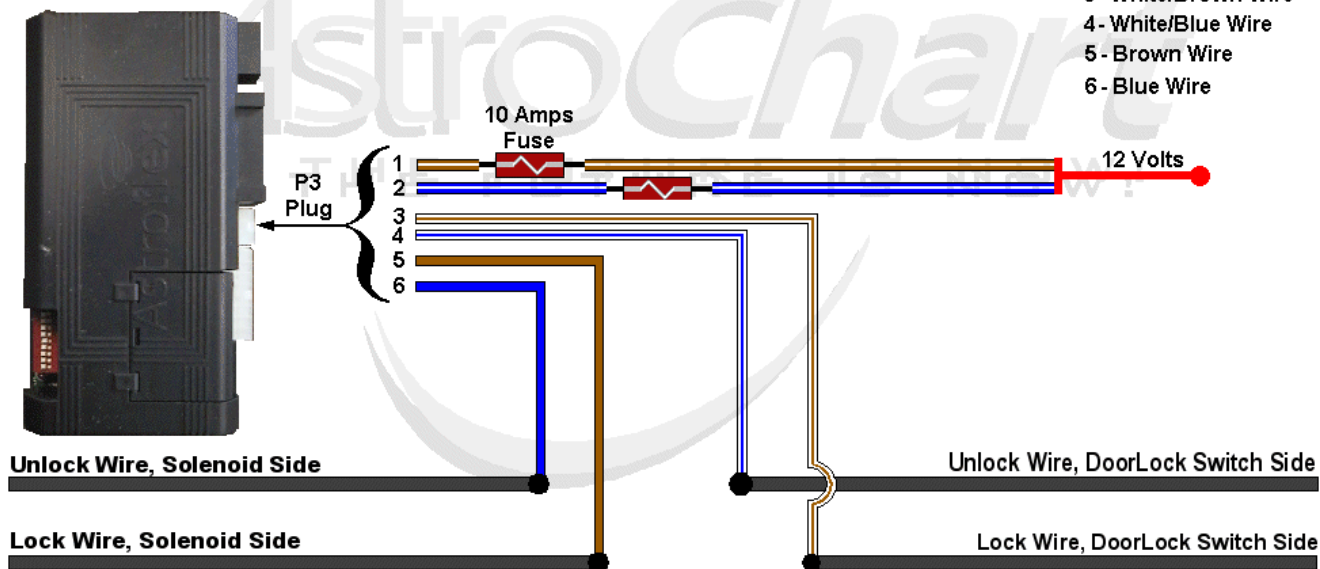


This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.


La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.

Chevrolet Tahoe 2002

Positive Polarity DoorLock With Negative Trigger Door Lock Output (-)

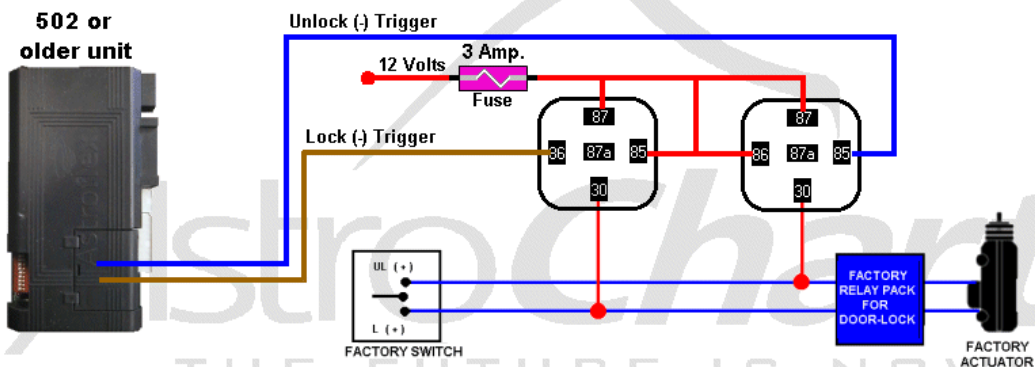

On AstroStart modul that has P3 connector with built in door lock relay

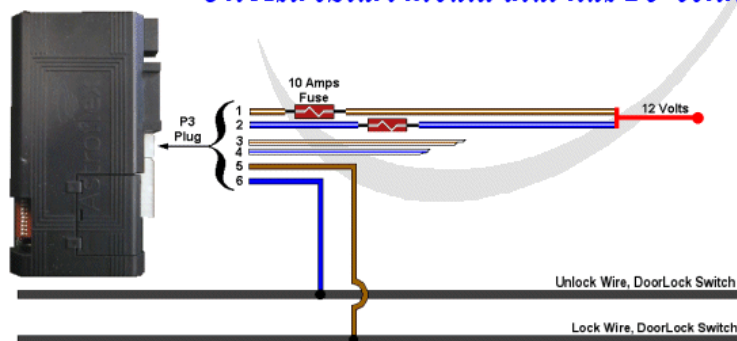

Legend


- 1 - Brown/White Wire
- 2 - Blue/White Wire
- 3 - White/Brown Wire
- 4 - White/Blue Wire
- 5 - Brown Wire
- 6 - Blue Wire

This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.

Chevrolet Tahoe 2002

GMC Truck Heated Seat Diagram

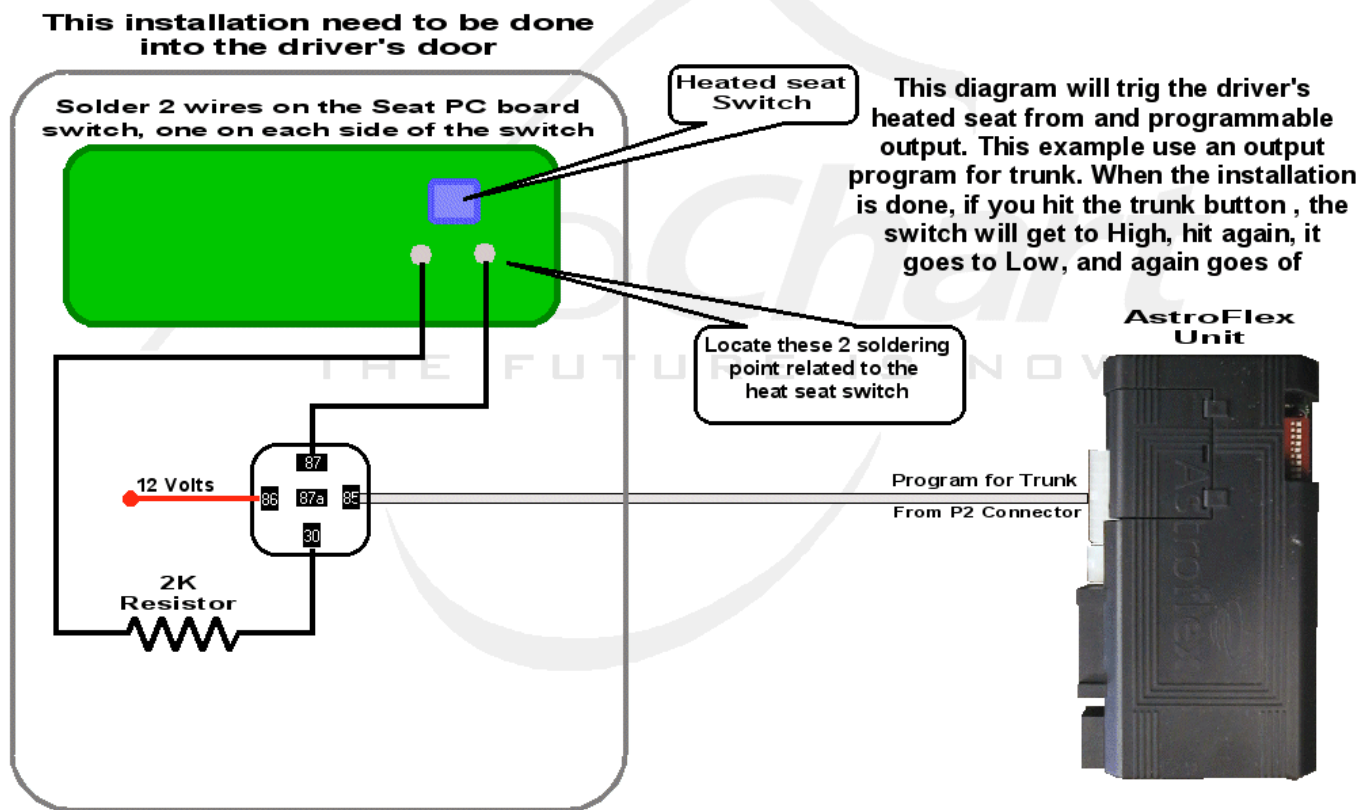

This data sheet is supplied as information purpose only. Astroflex does not, in any way, warranty accuracy of the data. Before attempting any installation or connections, the installer should verify all wires with either a multi-Meter or a high level probe that is computer and air bag safe. At all time, the installer assumes all damages, defects, or all other problems that could be linked to the installation process. ©Astroflex, 2003. All rights reserved.

La présente feuille de données est fournie à titre informatif seulement. Astroflex ne garantit d'aucune façon la justesse de ces données. Avant de procéder à l'installation ou de faire tout branchement, l'installateur doit vérifier tous les fils à l'aide d'un multimètre ou d'une sonde à haute impédance sécuritaire tant pour l'ordinateur que le coussin gonflable du véhicule. L'installateur assume en tout temps, l'entière responsabilité de tous dommages malfaçons ou autre résultant de l'installation. ©Astroflex, 2003. Tous droits réservés.